

Syncing the audio to the video

When streaming you may notice sometimes that the words spoken do not quite match the video. To sync the audio follow these steps

- 1) while you are streaming the video use the **remote controls menu button** (above the number 3) or your **keyboard mouse** and move to the bottom of the picture. The **Play** menu will appear then select the "**Speaker**" button second from the bottom right of the screen
- 2) The Audio and Subtitle settings menu appears then select "**Audio offset**"
- 3) "**Slide**" the bar to sync the audio with the picture
- 4) When satisfied press the "**back**" arrow on the remote or press "**esc**" on the keyboard